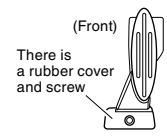
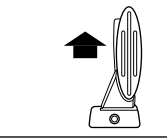
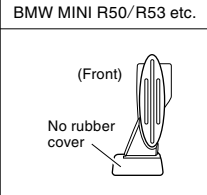
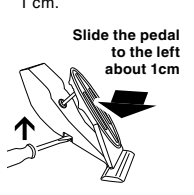
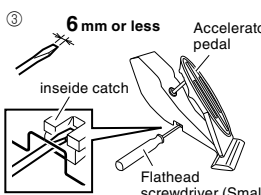
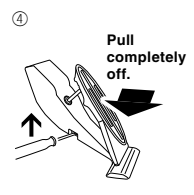


BMW & MINI Installing the Specialized Harness (TH-8A)

1 Turn the ignition to the OFF position and remove the accelerator pedal

To ensure that the specialized harness is installed properly, make sure to only carry out the installation after the accelerator pedal has been disconnected. (See below for details)

Common Example of How to Remove Accelerator Pedal Note: If different from shown below, contact your dealer for advice.




Type A	Type B
<p>Examples of Car Models; BMW E85/E87/E60, BMW MINI R56 etc.</p> <p>① Remove the rubber cover from the bottom of the accelerator pedal and unscrew the screw.</p>  <p>(Front) There is a rubber cover and screw</p> <p>② Pull off towards the top.</p> 	<p>Examples of Car Models; BMW E46, BMW MINI R50/R53 etc.</p> <p>① Dislodge the catch on the left side of the accelerator pedal with a wide (7mm or above) flathead screwdriver.</p>  <p>(Front) No rubber cover</p> <p>② Lift up with the screwdriver and slide the pedal to the left about 1 cm.</p>  <p>Slide the pedal to the left about 1cm</p> <hr/> <p>③ With a thinner flathead screwdriver (6mm or less), insert into the same place as in ①.</p>  <p>④ Lifting up as in ② with the screwdriver, slide the pedal further to the left and then pull completely off.</p>  <p>Pull completely off.</p>

2 Only disconnect the accelerator connector after having waited at least fifteen minutes from the time that the ignition turned to the OFF position

After the engine has been stopped for at least fifteen minutes, pull off the accelerator connector by pressing on the hooks on the sides of the connector (female side).



Depending on the type of vehicle, if the connector is disconnected before the ECU power is switched OFF, the Check Lamp may go on.
⇒ How to turn off the Check Lamp (User's Manual)

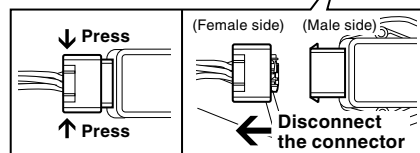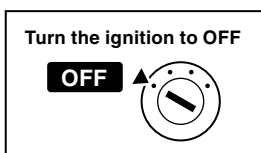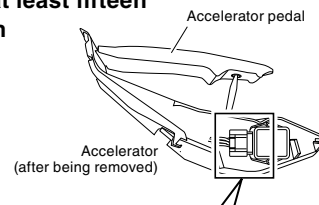

3 Insert the male side of the specialized harness into the female side of the accelerator connector

About insertion direction

Top side
Accelerator connector (female side)
Accelerator connector (female side)
Connector of harness (male side)
Insert the connector
Connector of harness (male side)

4 Insert the female side of the specialized harness into the male side of the accelerator connector

