


HARNESS No. 6A About Insertion Direction

※ When installing with TH-6A, please follow the directions as written below and the directions in the User's Manual (inside of the paperboard).


- ① **Disconnect the male and female connectors on the specialized harness.**

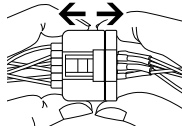


Pull out evenly
making sure not to bend the pins

- ② **Match the protruding part of the connector with the female part and insert to as far as it goes.**

The protruding part should be up


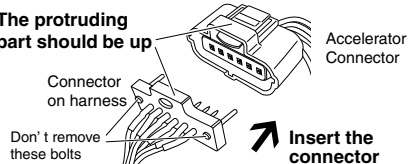


- ③ **To protect the connector, fasten by wrapping insulation tape around it.**

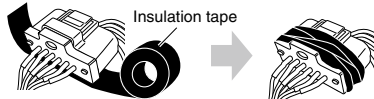

※ **If you do not have insulation tape, please fasten using the zip tie that is provided in the package.**

Zip tie (included)

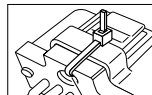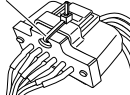

Run the zip tie through the hole

PIVOT CORPORATION

87-3, Shimookada Okada, Matsumoto-shi, Nagano, 390-0313 Japan
TEL0263-46-5901