
Please install after reading the "User's Manual" that came with your product.



USER'S MANUAL (Special Model Specific Harness) For 3-drive



- This product is designed for use with 3-drive. For safe use and avoid any accident do not use in conjunction with products from other manufacturers.
- ●Make sure to fasten the 6-pin connector in an area that is not exposed to water.
- 7 Turn the key to OFF, put Screw gear into P or N and remove the accelerator pedal. (If it is possible to disconnect the Accelerator coupler without removing Connector the accelerator pedal, Remove please proceed to step 2.) the Screw Remove (OFF) Accelerator the Screw Pedal
- After having waited at least 15 Press in on this minutes from the time that the part and pull to remove key was turned OFF, disconnect the accelerator connector with pressing down on the hook strongly Accelerator If the connector is disconnected within Accelerator Connector 15 minutes the Check Lamp may go on. 宣。 Passage of over 15 min Disconnect the connector

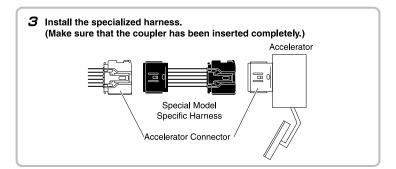

- 4 Return the accelerator pedal to its original position and make sure it is securely fastened.
- **5** Connect all other connectors. *For more details see the 3-drive User's Manual.

PIVOT CORPORATION

87-3, Shimookada Okada, Matsumoto-shi, Nagano, 390-0313 Japan TEL0263-46-5901